

Car Pro

Car-Pro CPX-2500 Installation Instructions

PROGRAMMING

A. PROGRAMMING THE TRANSMITTERS

The transmitters for CPX-2500 must be programmed by installer. You must follow the instructions indicated. It is important to remember that during programming each individual step must be executed within 10 seconds of the previous step. Otherwise, after 10 seconds has elapsed, the system will automatically exit the programming mode. If you should hear 3 long "chirps" from the siren, then programming has automatically ended.

NOTE: The maximum programming capacity is **4** transmitters.

1. Enter:
 - a. Turn the ignition key to the "on" position
 - b. Push the valet switch **6** times. There will be 1 long chirp from the siren.
 - c. You are now ready for programming.
2. Programming the transmitters:
 - a. Press the Lock button on the 1st transmitter. There will be 1 short chirp.
 - b. Within 10 seconds, Press the Lock button on the 2nd transmitter. There will be two short chirps.
 - c. Programming the 3rd & 4th transmitters, please repeat the previous two steps.
3. Exit:
 - a. Turn the ignition key to the "off" position or
 - b. Wait for 10 seconds after programming the last transmitter.
 - c. Confirmation will be 3 long chirps

NOTE: If more than 4 transmitters are programmed, the system will keep the last 4 programmed. Previously programmed transmitters will be pushed out. (e.g. If you program a 5th & 6th transmitter then transmitters 1 and 2 will be pushed out while transmitters 3,4,5,&6 will stay.

PROGRAMMING SYSTEM FEATURES

This system has **7** selectable programming features:

1. Enter:
 - a. Turn the ignition switch "on" then "off".
 - b. Within 10 seconds push the valet switch 3 times. There will be 1 long chirp.
 - c. Push the valet switch 3 more times. There will be 1 long chirp.
 - d. You are now in the feature programming mode. Use the chart below for programming the selectable features.

Push the valet switch:	Chirp & LED flash times	Turn the ignition switch from "OFF" to "ON" Confirmation: One short chirp	Turn the ignition switch from "ON" to "OFF" Confirmation: two short chirps
Default Settings			
1	1	Chirp On	Chirp Off
2	2	Active/Manual arming	Passive arming
3	3	Passive arming w/door locks On	Passive arming w/door locks Off
4	4	Ignition control door locks On	Ignition control door locks Off
5	5	Automatic Re-arm On	Automatic Re-arm Off
6	6	Door unlock-single pulse	Door unlock-double pulse
7	7	Door pulse timing .9 sec.	Door pulse timing 3.0 sec.

2. Exit: Press the arm button on the transmitter or leave for 15 seconds. Confirmation will be 3 long chirps.